


3WAVES ELECTRA LITE FUSE CHECKER

Supplies Required

- 3WAVES Electra Lite Device
- 3WAVES Fuse Checker
- 2x Cable Extenders

1

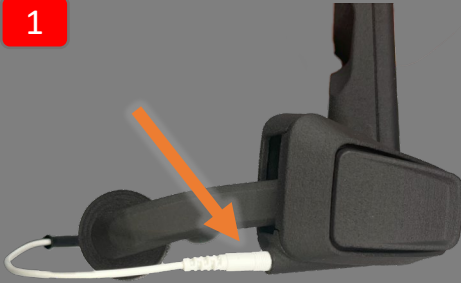

- Connect extenders to Electra Lite L/R outputs

2




- Plug extenders into Checker L/R ports

3




- Connect front cable to Checker front port

4

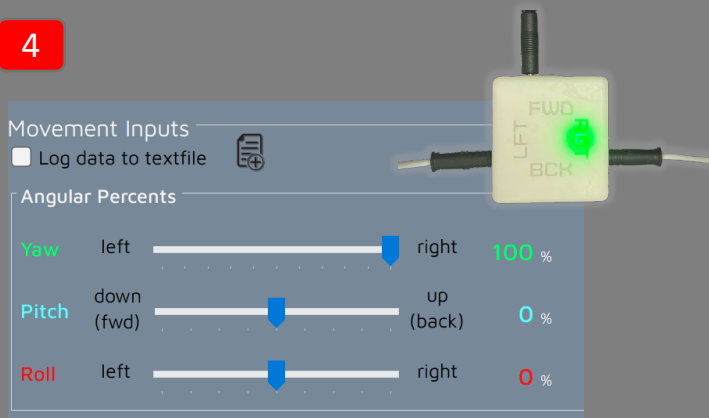

- Check Yaw outputs

5

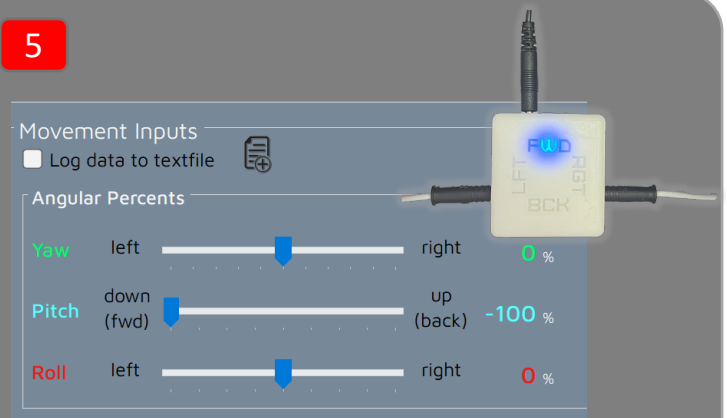

- Check Pitch outputs

If the lights fail to come on:

1. Check the extenders to make sure they are firmly plugged in.
2. Proceed to replace the fuses.

6

- Remove top from Electra Lite
- Use fingers or pliers to replace fuses

If pitch fails → replace fuse 1
If yaw fails → replace fuse 3
If both fail → replace fuse 2
(fuse 4 is an extra, used for replacements)

